



# Merlin Cellular Quick Start

## Mobile Interface Configuration

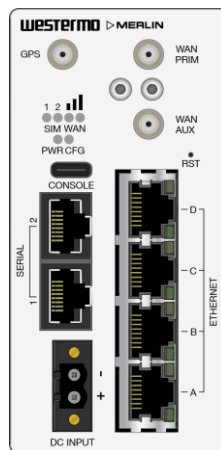

## Merlin Router Configuration

### Login To The Merlin

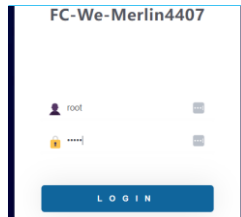

Login using default  
**root/admin**

### Mobile 4G Settings

Browse to **Network > Interfaces**.


In the MOBILE section, click the **EDIT** button.



Enter the appropriate APN (Access Point Name) provided by your mobile network provider.

**APN:** Enter your APN here  
**APN Username:** Only if applicable  
**APN Password:** Only if applicable

Scroll to the bottom of the page and click **Save and Apply**.

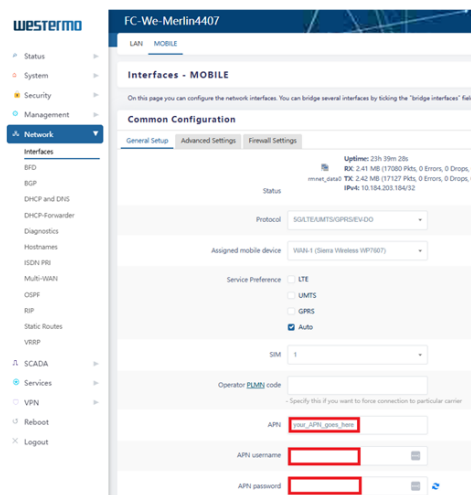


When the MOBILE interface is connected it will update and show the interface and status details.

Further cellular status information can be seen under **Status -> Mobile information** and **System -> System log**

## LAN IP Address.

Log in to the Merlin web configuration UI and browse to **Network > Interfaces**.

In the LAN section, click the **EDIT** button.

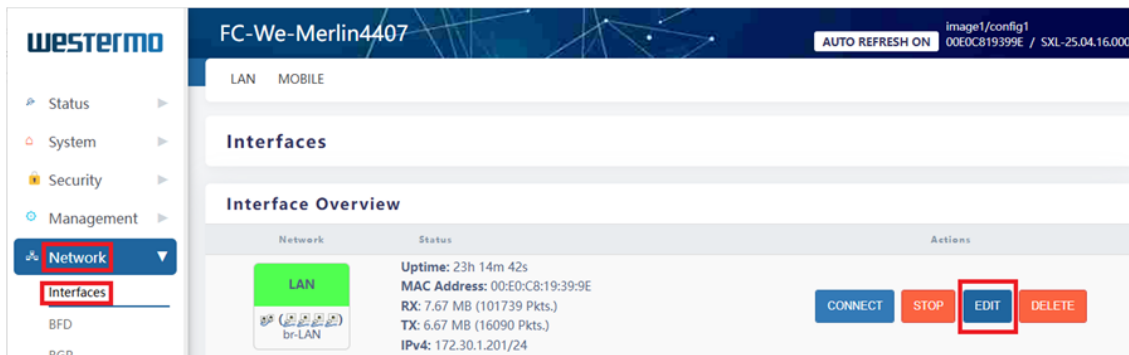


Next enter the new LAN IP address and subnet mask. Use an IP address and subnet mask appropriate for your application. Examples used in this note were:


**Protocol:** Static address

**IPv4 address:** 172.30.1.201

**IPv4 netmask:** 255.255.255.0

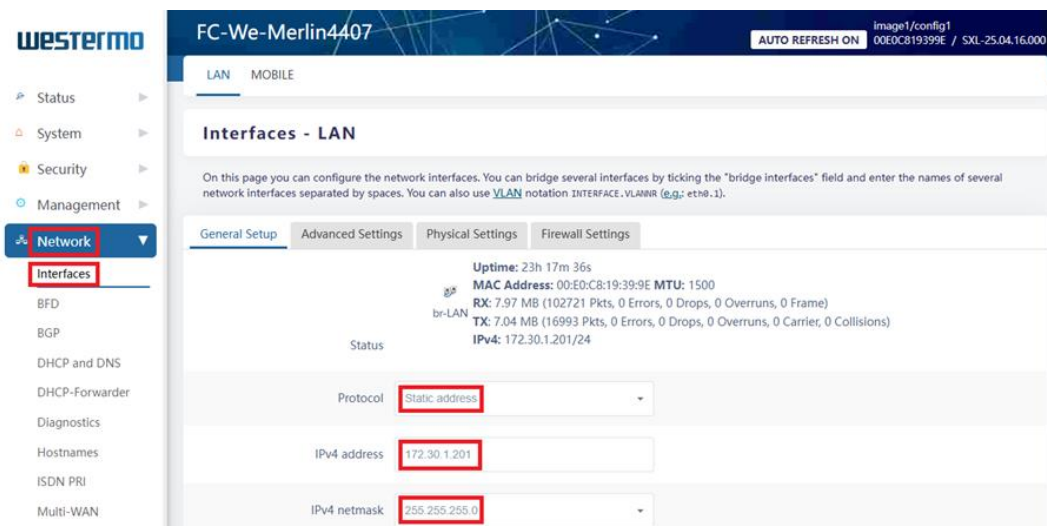

 Scroll to the bottom of the page and click **Save & Apply**.



Changing an IP address of the connected LAN interface will update and take effect immediately.



## Revision history for version 1.0

Revision	Rev by	Revision note	Date
00	VC	Release version	30/10/24
01			
02			
03			
04			
05			
06			
07			