



# RedFox 5328 Series

Industrial routing switches



# Table of Contents

1. General Information .....	3
1.1. Legal Information .....	3
1.2. About This Guide .....	3
1.3. Software Tools .....	3
1.4. License and Copyright for Included FLOSS .....	3
1.5. WeOS .....	3
2. Safety and Regulations .....	4
2.1. Warning Levels .....	4
2.2. Safety Information .....	5
2.3. Care Recommendations .....	7
2.4. Product Disposal .....	8
2.5. Compliance Information .....	8
2.5.1. Agency Approvals and Standards Compliance .....	8
2.5.2. EN/IEC 61010-2-201 Notice .....	8
2.5.3. EN/IEC/UL 62368-1 Notice .....	9
2.5.4. UL 62368-1 DC Mains Notice .....	9
2.5.5. FCC Part 15.105 Class A Notice .....	9
2.5.6. FCC Part 15.105 Class B Notice .....	10
2.5.7. Corrosive Environment .....	10
2.5.8. Simplified Declaration of Conformity .....	10
3. Product Description .....	11
3.1. Product Description .....	11
3.2. Available Models .....	11
3.3. Hardware Overview .....	12
3.4. Connector Information .....	12
3.4.1. Power Input .....	12
3.4.2. Console Port .....	13
3.4.3. SFP Transceivers .....	13
3.5. LED Indicators .....	14
3.6. Dimensions .....	15
4. Installation .....	16
4.1. Mounting .....	16
4.1.1. Rack Mounting .....	16
4.1.2. Wall Mounting .....	16
4.2. Protective Earth Connection .....	16
4.3. Cooling .....	16
5. Specifications .....	17
5.1. Interface Specifications .....	17
5.2. Type Tests and Environmental Conditions .....	19
6. Revision Notes .....	23

# 1. General Information

## 1.1. Legal Information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind are made in relation to the accuracy and reliability or contents of this document, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at [www.westermo.com](http://www.westermo.com).

## 1.2. About This Guide

This guide is intended for installation engineers and users of the Westermo products.

It includes information on safety and regulations, a product description, installation instructions and technical specifications.

## 1.3. Software Tools

Related software tools are available at <https://www.westermo.com/support/product-support>.

## 1.4. License and Copyright for Included FLOSS

This product includes software developed by third parties, including Free/Libre Open Source Software (FLOSS). The specific license terms and copyright associated with the software are included in each software package respectively. Please visit the product web page for more information.

Upon request, the applicable source code will be provided. A nominal fee may be charged to cover shipping and media. Please direct any source code request to your normal sales or support channel.

## 1.5. WeOS

This product runs WeOS 5 (Westermo Operating System). Instructions for quick start, configuration and factory reset are found in the WeOS user documentation at [www.westermo.com](http://www.westermo.com).

## 2. Safety and Regulations

### 2.1. Warning Levels

Warning signs are provided to prevent personal injuries and/or damages to the product. The following levels are used:





Level of warning	Description	Consequence personal injury	Consequence material damage
 WARNING	Indicates a potentially hazardous situation	Possible death or major injury	Major damage to the product
 CAUTION	Indicates a potentially hazardous situation	Minor or moderate injury	Moderate damage to the product
 NOTICE	Provides information in order to avoid misuse of the product, confusion or misunderstanding	No personal injury	Minor damage to the product
 NOTE	Used for highlighting general, but important information	No personal injury	Minor damage to the product

Table 1. Warning levels

## 2.2. Safety Information

### Before installation:

Read this manual completely and gather all information available on the product. Make sure it is fully understood. Check that your application does not exceed the safe operating specifications for the product.



### **SAFETY DURING INSTALLATION**

The product must be installed and operated by qualified service personnel and installed into an apparatus cabinet or similar, where access is restricted to service personnel only.

Refer to chapter Compliance Information to see the required level of qualified service personnel according to safety standards.

Before energising and connecting communication cables to the product, ensure a protective earthing conductor is first connected to the protective earthing terminal (only valid for metallic housings). Westermo recommends a cross-sectional area of at least 4 mm<sup>2</sup>.

Upon removal of the product, disconnect the product from the power supply and all other communication ports before disconnecting the protective earthing conductor.



### **HAZARDOUS VOLTAGE**

Do not open an energised product. Hazardous voltage may occur when connected to a power supply.

*For RedFox models with a rated voltage above 48 VDC or 30 VAC: Apply the protective cap (delivered with the product) on the power cable.*






### **WARNING - PREVENT ACCESS TO HAZARDOUS VOLTAGE CABLE**

Apply the protective cap (delivered with the HV products) on the power cable, according to the illustrated steps below.

To prevent accidentally pulling out wires, make sure the power cable and the wires are firmly attached to the protective cap.

For screw connectors, make sure the screws are properly tightened, as well as routing the wires separately from other wires. For connectors with straps, fasten the cable as strain relief, as well as routing the wires separately.

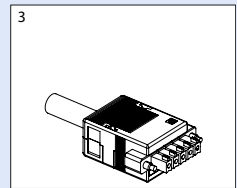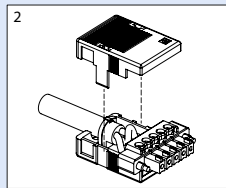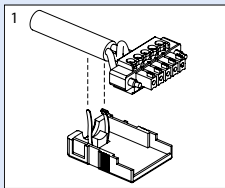

### **PROTECTIVE FUSE**

The power supply wiring must be sufficiently fused.

It must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.

Replacing the internal fuse must only be performed by Westermo qualified personnel.



### **POWER SUPPLY CONNECTION**

There are safety regulations governing the power source that can be used in conjunction with the product. Refer to chapter Interface Specifications.



### **REDUCE THE RISK OF FIRE**

To reduce the risk of fire, use only telecommunication line cords with a cable diameter of AWG 26 or larger. Regarding power cable dimensions, see chapter Interface Specifications.



### **CLASS 1 LASER PRODUCT**

Do not look directly into a fibre optical port or any connected fibre, although the product is designed to meet the Class 1 Laser regulations and complies with 21 CFR 1040.10 and 1040.11.



### **HANDLING OF SFP TRANSCEIVERS**

SFP transceivers are supplied with plugs to avoid contamination inside the optical port. They are very sensitive to dust and dirt. If the fibre optic cable is disconnected from the product, a protective plug must be used on the transmitter/receiver. The protective plug must be kept on during transportation. The fibre optic cable must be handled the same way.



### **CORROSIVE GASES**

If the product is placed in a corrosive environment, it is important that all unused connector sockets are protected with a suitable plug, in order to avoid corrosion attacks on the gold plated connector pins.



### **ELECTROSTATIC DISCHARGE (ESD)**

Prevent electrostatic discharge damage to internal electronic parts by discharging your body to a grounding point (e.g. use a wrist strap).

## **2.3. Care Recommendations**

Follow the care recommendations below to maintain full operation of the product and to fulfill the warranty obligations:

- Do not drop, knock or shake the product. Rough handling above the specification may cause damage to internal circuit boards.
- Use a dry or slightly water-damp cloth to clean the product. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Do not paint the product. Paint can clog the product and prevent proper operation.

If the product is used in a manner not according to specification, the protection provided by the equipment may be impaired.

If the product is not working properly, contact the place of purchase, the nearest Westermo distributor office or Westermo technical support.

## 2.4. Product Disposal

This symbol means that the product shall not be treated as unsorted municipal waste when disposing of it. It needs to be handed over to an applicable collection point for recycling electrical and electronic equipment.

By ensuring the product is disposed of correctly, you will help to reduce hazardous substances and prevent potential negative consequences to both the environment and human health, which could be caused by inappropriate disposal.



Figure 1. WEEE symbol for treatment of product disposal

## 2.5. Compliance Information

### 2.5.1. Agency Approvals and Standards Compliance

Type	Approval/Compliance
EMC	<ul style="list-style-type: none"><li>EN 50121-4/IEC 62236-4, Railway signalling and telecommunications apparatus</li><li>EN/IEC 61000-6-1, Immunity residential environments<sup>a</sup></li><li>EN/IEC 61000-6-2, Immunity industrial environments</li><li>EN/IEC 61000-6-3, Emission residential environments<sup>a</sup></li><li>EN/IEC 61000-6-4, Emission industrial environments</li></ul>
Safety	<ul style="list-style-type: none"><li>EN/IEC/UL 62368-1, Safety Requirements for audio/video, information and communication technology equipment<sup>a</sup></li><li>EN/IEC/UL 61010-1, Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements<sup>b</sup></li><li>EN/IEC/UL 61010-2-201, Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 2-201: Particular requirements<sup>b</sup></li></ul>

<sup>a</sup>Valid for all RedFox-5328(-E)-LV models

<sup>b</sup>Valid for all RedFox-5328(-E)-HV models

Table 2. Agency approvals and standards compliance

### 2.5.2. EN/IEC 61010-2-201 Notice<sup>1</sup>

This product has been tested and found compliant to EN/IEC/UL 61010-2-201, Safety requirements for electrical equipment for measurement, control, and laboratory use. In accordance with the definitions of the standard, this product shall be handled by skilled service personnel.

<sup>1</sup>Valid for all RedFox-5328(-E)-HV models



### 2.5.3. EN/IEC/UL 62368-1 Notice<sup>2</sup>

This product has been tested and found compliant to EN/IEC/UL 62368-1, Safety for Communication Technology. In accordance with the definitions of the standard, this product shall be handled by instructed personnel. Energy source classifications are according to following:

Electrical energy source	Power port	ES1 (LV models)
	Serial port	ES1
	Ethernet port	ES1, TNV-1
Power source	Power port	PS3
Thermal energy source	Enclosure	TS1
Mechanical energy source	Enclosure	MS1 (MS3 for wall or ceiling mounting)
Radiation energy source	SFP	RS1

Table 3. EN/IEC/UL 62368-1 notice

### 2.5.4. UL 62368-1 DC Mains Notice

In accordance with UL 62368-1, Annex DVD and DVH then Westermo does not recommend using the mechanical enclosure/chassis (PE) as a conductive part of the sourced earthed DC power system in a DC mains distribution networks. If so, the transient protective barriers are compromised, and the product will not be compliant to evaluated standards and immunity performance according to type test table in the user guide.

The earthing electrodes shall be located at the source in the DC distribution system and separate earth and protective earth conductors shall be provided throughout the system.

The field wiring shall be sufficient fixated and the protective cap for the power connector, which is supplied with the product, shall be used on DC voltages higher than 60 VDC.

### 2.5.5. FCC Part 15.105 Class A Notice<sup>3</sup>

This product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment.

This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user manual, may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the users own expense.

<sup>2</sup>Valid for all RedFox-5328(-E)-LV models

<sup>3</sup>Valid for all RedFox-5328(-E)-HV models

### 2.5.6. FCC Part 15.105 Class B Notice<sup>4</sup>

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the unit and receiver
- Connect the product into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

### 2.5.7. Corrosive Environment<sup>5</sup>

This product has been successfully tested in a corrosion test according to IEC 60068-2-60, method 3. This means that the product meets the requirements to be placed in an environment classified as ISA-S71.04 class G3.



#### **CORROSIVE GASES**

If the product is placed in a corrosive environment, it is important that all unused connector sockets are protected with a suitable plug, in order to avoid corrosion attacks on the gold plated connector pins.

### 2.5.8. Simplified Declaration of Conformity

Hereby, Westermo declares that this product is in compliance with applicable EU directives and UK legislations. The full declaration of conformity and other detailed information is available at [www.westermo.com/support/product-support](http://www.westermo.com/support/product-support).



Figure 2. The European Conformity and the UK Conformity Assessment markings

<sup>4</sup>Valid for all RedFox-5328(-E)-LV models

<sup>5</sup>Valid for all RedFox-5328(-E)-LV models

## 3. Product Description

### 3.1. Product Description

The RedFox 5328 series is designed for the core of large high-performance industrial networks and has been developed to cater to the needs of current and future industrial data networks, combining outstanding performance, durability and reliability. These switches are ideal for handling the big data and high bandwidth requirements typically found within transportation, manufacturing, energy, smart cities and other applications.

Integrating hardware, software and network design support tools, this next generation switch platform offers advanced capabilities, the lowest total cost of ownership and will create the most reliable and resilient networks on the market.

The switch is engineered to maintain uninterrupted data communication, even in exceptionally harsh environments. The RedFox 5328 series is tested and certified to withstand extreme temperatures, vibrations and shocks. The switches only use industrial grade components which contributes towards a market leading mean time between failure (MTBF), maximized service life, and reduced operational and life cycle costs.

Various port configurations are available, that can be further customized with SFP transceivers. The RedFox 5328 series is available with either a DC or AC power supply.


The RedFox 5328 series is powered by the next generation WeOS operating system, which ensures robust operation and support for an expanding range of protocols and features. In addition, recognizing the growing sophistication of cyberattacks, an extensive suite of cyber security tools is available.

The switches are also prepared for routing acceleration, extended cybersecurity and time synchronization IEEE 1588v2 applications, making them an ideal solution to meet future security and bandwidth requirements.

### 3.2. Available Models

Art. no.	Model	No. of copper ports	No. of SFP ports	LV	HV
3641-4710 3641-4610	RedFox-5328-F4G-T24-LV RedFox-5328-E-F4G-T24-LV	24	4	24-48 VDC	
3641-4718 3641-4618	RedFox-5328-F4G-T24-HV RedFox-5328-E-F4G-T24-HV	24	4		110-240 V AC/DC

### 3.3. Hardware Overview

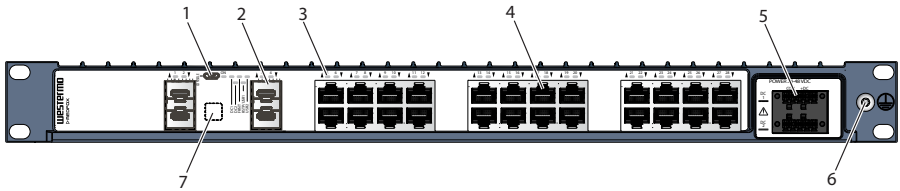

No.	Description	No.	Description
1	Console port	2	100/1000 Mbit/s SFP ports
3	LED indicators	4	10/100 Mbit/s TX ports
5	Power Input	6	Protective earth
7	Label with data matrix <sup>a</sup>		

<sup>a</sup>The base MAC address and production date of the product is included in the front label data matrix.

Figure 3. Location of interface ports and LED indicators

### 3.4. Connector Information

#### 3.4.1. Power Input

Illustration	Product marking	Direction	Description
<p>DC 1</p> <p>DC 2</p>	+DC1	Input	Supply voltage
	+DC2	Input	Supply voltage
	-COM	Input	Common
	-COM	Input	Common

Table 4. Power input LV models

Illustration	Position	Product marking	Direction	Description
<p>AC/DC 1</p>	AC/DC1	L(+)	Input	Line/Phase (AC), positive (DC)
		N(-)	Input	Neutral (AC), negative/return (DC)
		⏏	Input	Functional earth

Table 5. Power input HV models




## **WARNING - PREVENT ACCESS TO HAZARDOUS VOLTAGE CABLE**

Apply the protective cap (delivered with the HV products) on the power cable, according to the illustrated steps below.

To prevent accidentally pulling out wires, make sure the power cable and the wires are firmly attached to the protective cap.

For screw connectors, make sure the screws are properly tightened, as well as routing the wires separately from other wires. For connectors with straps, fasten the cable as strain relief, as well as routing the wires separately.

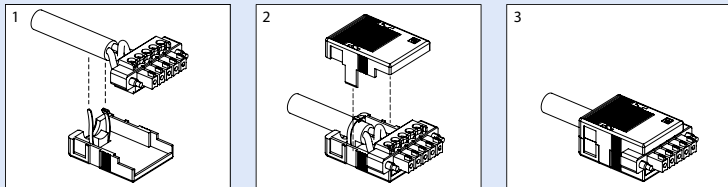

### **3.4.2. Console Port**

The console port can be used to connect to the CLI (Command Line Interface). The console connector is a USB cable that connects to a FTDI FT232R USB to serial converter internally. For drivers, refer to [www.ftdichip.com](http://www.ftdichip.com) and download the appropriate VCP driver.

### **3.4.3. SFP Transceivers**

The product supports UL and IEC certified transceivers only. See Westermo's modular transceivers datasheets 100 Mbit and 1 Gbit for supported SFP transceivers, which can be downloaded from the product support pages at [www.westermo.com/support/product-support](http://www.westermo.com/support/product-support).

Each SFP slot can hold one SFP transceiver. See "Transceiver User Guide 6100-0000" for transceiver handling instructions, which also can be downloaded from the product support pages at [www.westermo.com/support/product-support](http://www.westermo.com/support/product-support).

In the event of contamination, the optical connectors in the SFP transceivers should only be cleaned by the use of forced nitrogen and some kind of cleaning stick. Recommended cleaning fluids are methyl-, ethyl-, isopropyl- or isobutyl alcohol, hexane or naphtha.



## HANDLING OF SFP TRANSCEIVERS

SFP transceivers are supplied with plugs to avoid contamination inside the optical port. They are very sensitive to dust and dirt. If the fibre optic cable is disconnected from the product, a protective plug must be used on the transmitter/receiver. The protective plug must be kept on during transportation. The fibre optic cable must be handled the same way.

### 3.5. LED Indicators

LED	Status	Description
ON	OFF	Product has no power
	GREEN	All OK, no alarm condition
	RED	Alarm condition, or until product has started up. (Alarm conditions are configurable, see <i>WeOS5 User Guide</i> )
RSTP/ USR1	OFF	RSTP disabled
	GREEN	RSTP enabled
	BLINK	Product selected as RSTP/STP root switch
	USR1	Configurable, see <i>WeOS5 User Guide</i>
FRNT	OFF	FRNT disabled
	GREEN	FRNT OK
	RED	FRNT error
	FLASH	Product configured as FRNT focal point
DC1 / AC/DC1	OFF	Product has no power
	GREEN	Power OK on DC1 / AC/DC1
	RED	Input voltage is below operating voltage limit
DC2	OFF	Product has no power
	GREEN	Power OK on DC2
	RED	Input voltage is below operating voltage limit
USR2	Configurable, see <i>WeOS5 User Guide</i>	
TX/FX ports	OFF	No link
	GREEN	Link established
	GREEN FLASH	Data traffic indication
	YELLOW	Port alarm, or port is set in blocking state by link redundancy protocol

Table 6. LED indicators

### 3.6. Dimensions

Dimensions are stated in mm.

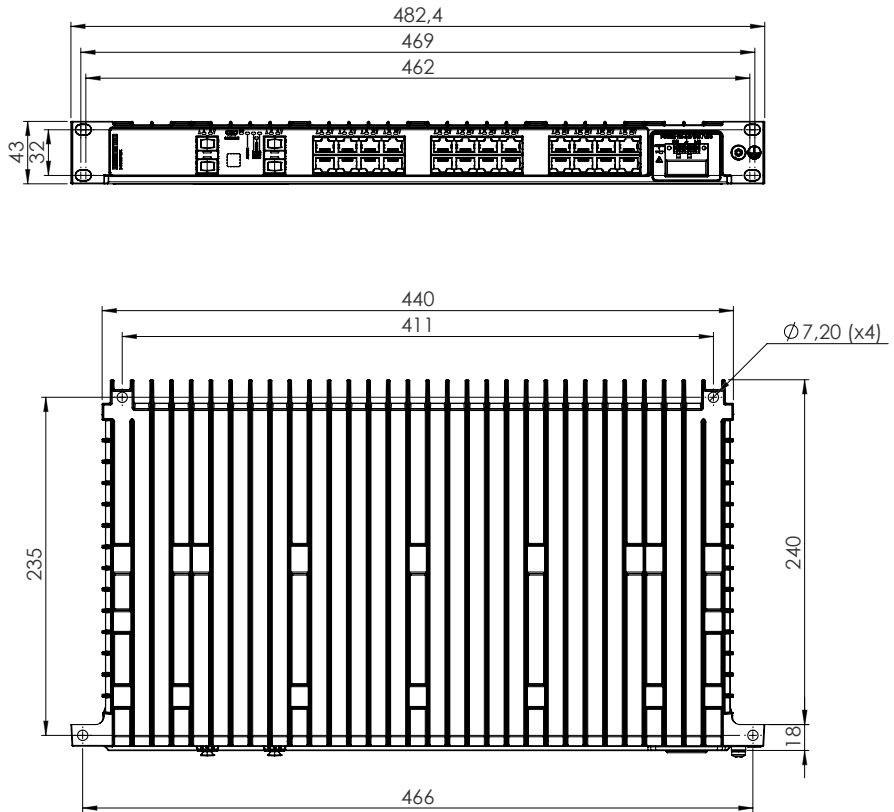


Figure 4. Dimensional drawing

## 4. Installation

### 4.1. Mounting

RedFox is designed for installation in 19" rack solutions according to ETSI standard, with a shallow depth of 240 millimetres. It can also be wall mounted as an installation option.

#### 4.1.1. Rack Mounting

The product can be mounted in all directions inside a 19" apparatus cabinet. Use supplied M6x25 (Philips no. 3) or 1/4x1" screws.

#### 4.1.2. Wall Mounting

The product can be wall mounted in all directions. Use maximum 6.4 mm or 1/4" screws.

### 4.2. Protective Earth Connection

For correct function, the earth connection needs to be properly connected to a designated PE rail. Torx: T25 and torque: 3.2 Nm.

### 4.3. Cooling

This product relies on convection cooling. To avoid obstruction of the airflow around the product, follow the spacing recommendations.

For mounting in 19" apparatus cabinet without forced ventilation, a minimal spacing of 1U according to IEC 60297 or 45 mm (1.75") above/below is recommended. With forced ventilation, no minimal spacing is required as long as the temperature of the rear cooling plates does not exceed +85°C (+185°F).

For wall mounting in an area without forced ventilation, a minimum spacing of 45 mm (1.75") above/below and 10 mm (0.4") left/right is recommended. For areas with forced ventilation, no minimal spacing is required as long as the temperature of the rear cooling plates does not exceed +85°C (+185°F).



## 5. Specifications

### 5.1. Interface Specifications

Power port	
Rated voltage	For LV models: 24-48 VDC For HV models: 110-240 V AC/DC
Operating voltage	For LV models: 18-60 VDC For HV models: 85-264 VAC 47-63 Hz, 85-264 VDC
Rated current	RedFox-5328-(E)-F4G-T24-LV: 0.73 A at 24 VDC 0.37 A at 48 VDC
	RedFox-5328-(E)-F4G-T24-HV: 0.10 A at 240 V AC/DC 0.19 A at 110 V AC/DC
Fuse rating  Component: U2 (LV), U43 (HV)	LV models: 4A(T), 125 VDC, breaking capacity 100 A, UL248-14 HV models: 4A(T), 350 VAC/VDC, breaking capacity 100 A, UL248-14
Rated frequency	DC (LV models), DC, 50-60 Hz (HV models)
Inrush current, I <sup>2</sup> t <sup>a</sup>	For all LV-models: 125 mA <sup>2</sup> s at 24 VDC 82 mA <sup>2</sup> s at 48 VDC
	For all HV-models: 4 mA <sup>2</sup> s at 240 VAC, 50 Hz 0.4 mA <sup>2</sup> s at 110 VAC, 60 Hz 2 mA <sup>2</sup> s at 240 VDC 0.1 mA <sup>2</sup> s at 110 VDC
Startup current <sup>b</sup>	2x nominal current
Polarity	Reverse polarity protected (LV models, not applicable for HV models)
Redundant power input	Yes (LV models)
Isolation	All other ports
Connector	Detachable screw terminal
Conductor cross section	0.5-1.5 mm <sup>2</sup> (AWG 20-16) Use copper conductors only.
Stripping length cable	7 mm
Cable temperature rating	Minimum temperature rating of the cable to be connected to the field wiring terminals is +77 °C
Tightening torque, terminal screw	0.34 Nm
Tightening torque, screw flange	0.34 Nm
Shielded cable	Not required

<sup>a</sup>Measured for 1 second at startup

<sup>b</sup>Recommended external supply current capability for proper startup

<b>Ethernet TX<sup>a</sup></b>	
Electrical specification	IEEE std 802.3
Data rate	10 Mbit/s, 100 Mbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	TNV-1
Transmission range	Up to 100 m with CAT5e cable or better
Isolation	All other ports
Cabling	Shielded cable CAT5e or better is recommended
Conductive chassis	Yes

<sup>a</sup>10/100 Mbit/s ports are: 5-28

<b>SFP ports<sup>a</sup></b>	
Optical/Electrical specification	IEEE std 802.3
Data rate	100 Mbit/s, 1000 Mbit/s <sup>b</sup>
Duplex	Full or half, manual or auto
Transmission range	Depending on transceiver
Connector	SFP slot holding fibre transceiver

<sup>a</sup>SFP ports are: 1-4

<sup>b</sup>100 Mbit/s or 1000 Mbit/s transceiver supported

<b>Console port</b>	
Electrical specification	USB 2.0 device interface
Data rate	Up to 480 Mbps (high-speed mode)
Circuit type	SELV
Maximum supply current	100 mA
Connector	USB Micro B connector in device mode

## 5.2. Type Tests and Environmental Conditions

Environmental phenomena	Basic standard	Description	Test levels
ESD	EN 61000-4-2	Enclosure	Contact: $\pm 6$ kV Air: $\pm 8$ kV
Fast transients	EN 61000-4-4	Power port	$\pm 2$ kV
		Earth port	
Surge 1.2/50 $\mu$ s	EN 61000-4-5	Power port	LV models: L-E: $\pm 1$ kV, $12 \Omega$ , $9 \mu$ F L-E: $\pm 2$ kV, $42 \Omega$ , $0,5 \mu$ F L-L: $\pm 0,5$ kV, $2 \Omega$ , $18 \mu$ F L-L: $\pm 1$ kV, $42 \Omega$ , $0,5 \mu$ F HV models: L-E: $\pm 2$ kV, $12 \Omega$ , $9 \mu$ F L-L: $\pm 1$ kV, $2 \Omega$ , $18 \mu$ F
		Ethernet ports	L-E: $\pm 2$ kV, $2 \Omega$ direct on shield
Power frequency magnetic field	EN 61000-4-8	Enclosure	HV models: 100 A/m, cont. 1000 A/m, 3 s
Voltage dips and interruptions	EN 61000-4-11	AC power port	HV models: 0% $U_T$ , 1 cycle 0% $U_T$ , 250/300 cycles at 50/60 Hz 40% $U_T$ , 10/12 cycles at 50/60 Hz
Pulsed magnetic field	EN 61000-4-9	Enclosure	300 A/m
Radiated RF immunity	EN 61000-4-3	Enclosure	20 V/m at (80 MHz to 2 GHz) 10 V/m at (2-6 GHz) 1 kHz sine, 80% AM
Conducted RF immunity	EN 61000-4-6	Power port	10 V, 80% AM, 1 kHz; (0.15-80) MHz
		Ethernet ports	
		Earth port	
Radiated RF emission	CISPR 16-2-3	Enclosure	LV models: Class B HV models: Class A (30-6000 MHz)
	ANSI C63.4		LV models: Class B HV models: Class A (FCC Part 15 B, 30 MHz -25.5 GHz)
Conducted RF emission	CISPR 16-2-1	Power port	LV models: Class B HV models: Class A
	ANSI C63.4		LV models: Class B HV models: Class A (FCC Part 15 B)
	CISPR 22	Ethernet ports	LV models: Class B HV models: Class A

<b>Environmental phenomena</b>	<b>Basic standard</b>	<b>Description</b>	<b>Test levels</b>
Dielectric strength	EN/IEC/UL 62368-1	Power port to all other ports	LV models: 1500 VAC rms, 60 s
		Ethernet ports to all other ports	
	IEC 60255-27	Power port (AC, DC) to all other ports	HV models: 2000 VAC rms, 60 s
	IEEE 802.3	Ethernet ports to all other ports	1500 VAC rms, 60 s

*Table 7. EMC and electrical conditions*

Environmental phenomena	Basic standard	Description	Test levels
Temperatures	EN 60068-2-1 EN 60068-2-2	Operational	For LV models: -40 to +74°C (-40 to +165°F) For HV models: -40 to +70°C (-40 to +158°F)
		Storage and transport	-50 to +85°C (-58 to +185°F)
Humidity	EN 60068-2-30	Operational	5-95 % relative humidity
		Storage and transport	
Corrosive gases <sup>a</sup>	IEC 60068-2-60	Operating	Method 3, 21 days <sup>b</sup>
Altitude		Operational	2000 m/80 kPa
MTBF hours	MIL-HDBK 217F		RedFox-5328-(E)-F4G-T24-LV: 371,000 RedFox-5328-(E)-F4G-T24-HV: 316,000
	Telcordia		RedFox-5328-(E)-F4G-T24-LV: 643,000 RedFox-5328-(E)-F4G-T24-HV: 678,000
Vibration	IEC 60068-2-6 (sine)	Operational	2 g rms 5-500 Hz, 5 sweeps
	IEC 60068-2-64 (random)	Operational, endurance test	12 dB/octave, 2-13.2 Hz, 0.011 g <sup>2</sup> /Hz, 13.2-100 Hz, 1.0 grms, 150 minutes per axis
			5-2000 Hz, rms 2.3 m/s <sup>2</sup> , 1.5h
Shock	IEC 60068-2-27	Operational	30 g, 11 ms
Enclosure	EN/IEC/UL 62368-1	Aluminium	Fire enclosure
Weight			3.8 kg
Degree of protection	EN 60529	Enclosure	IP40
Cooling			Convection
Pollution degree	EN/IEC/UL 61010-1, EN 50124-1, EN/IEC/UL 62368-1		HV models: PD2 Macro and Micro Environment
Overvoltage category	EN/IEC/UL 61010-1, EN/IEC/UL 62368-1		HV models: OVC II
Insulation class	EN/IEC/UL 61010-1		HV models: Class I equipment

Environmental phenomena	Basic standard	Description	Test levels
Location			Indoor use

<sup>a</sup>For LV models only

<sup>b</sup>Method 3, 21 days corresponds to Harsh Industrial Environment G3 which is defined in ANSI/ISA 17.04: 2015

*Table 8. Environmental and mechanical conditions*

## 6. Revision Notes

<b>Revision</b>	<b>Date</b>	<b>Change description</b>
Rev. A	2023-10	First version of the user guide

# WESTERMO

Westermo • Metallverksgatan 6, SE-721 30 Västerås, Sweden

Tel +46 16 42 80 00 Fax +46 16 42 80 01

E-mail: [info@westermo.com](mailto:info@westermo.com)

[www.westermo.com](http://www.westermo.com)